

Digital photo frame User operation Guide



Contents

Introduction.....	3
Main features.....	3
Accessories	3
Remote control.....	4
Operations.....	5
Supported memory cards.....	5
Main menu.....	6
Viewing individual picture.....	6
Listening to MP3 music.....	7
Playing video files.....	8
E-book	9
Playing slide show with Background music.....	9
Delete files in the file list screen.....	9
Calendar and alarm clock.....	11
Feature Setup.....	11

Introduction

Congratulations on your purchase of our digital photo frame.

Before operating the unit, please read this manual carefully, and retain it for future reference.

This manual will help you use many exciting and useful features that will make your photo frame viewing more enjoyable. It includes a step-by-step guide to the basics on photo frame operation including instructions on uploading and playing photo, music ,video and e-book.

You will also be able to create a slideshow using multiple transition effects or display one picture at a time.

Main Features

- Display digital picture in Hi-resolution and great quality
- Create an automatic slide show with multiple transition effects and optional background music.
- New auto-rotate feature shifts photos when frame is turned vertical.
- Supports JPEG format images
- Play mp3 music with the integrated stereo speakers.
- Supports e-book with TXT format.
- Play mpeg1, mpeg2 and mpeg4 movie files stored on supported memory cards.
- compatible with many memory cards including, SD, MMC,MS cards, Compact Flash as well as USB flash drives.
- New Calendar mode with slideshow and alarm clock.
- User-friendly on screen display lets you easily access all features.
- Includes a credit card-sized remote control.

Unit accessories

Open the package and remove the foam packing.

Remove the photo frame from its protective sleeve.

Install the digital photo frame stand at the rear of the unit. The stand can be mounted horizontally or vertically for portrait display.

Insert the DC jack and plug the adapter into any 120V outlet.








Insert the media into the correct slot and turn power to ON position.

- | | |
|--------------------------|-----|
| 1. digital photo frame | 1pc |
| 2. remote control | 1pc |
| 3. AC adapter | 1pc |
| 4. user operation manual | 1pc |

NOTES: the products design specifications are subject to change without notice, all rights reserved

Remote control



	power on/off
	mute
	background music
CALENDAR	calendar and alarm clock
PHOTO	enter into photo-playing mode
MUSIC	enter into music-playing mode
MOVIE	enter into video-playing mode
EXIT	exit and return to previous menu
	Move the cursor upward/downward/leftward/rightward
ENTER	Enter and confirm
	fast forward and backward
	Previous and next
	Pause and play
VOL- VOL+	Volume increase and decrease
OSD	info bar

Operation

Photos music video and e-book can display directly from your memory card

Supported memory cards:

The digital picture frame is compatible with the following memory cards:

Secure Digital card (SD)

Multi-Media Card (MMC)

Memory Stick (MS)

Insert the memory card with the front label facing away from you. Do not force the memory card into the memory slot, if you are unable to insert the memory card easily, you must have inserted it in the wrong way. Reverse it and try again.

Notes:

The digital picture frame will only recognize digital picture stored in jpeg format. Digital picture stored in other formats will be ignored by the device.

Make sure you have at least one picture stored in the memory card. The frame will not function properly without a stored picture.

You can also use a USB flash drive. It operate the same way as memory card. Simply insert the flash drive into the USB host plug on the side of the frame.

Under The slide show mode, your photos will play automatically. The slide show will play your photos in the order which they are listed on your memory card.

You can rearrange them using a PC.

To select and view an individual picture, please see “ Viewing Individual Pictures” on page 6

Main Menu

When the digital Photo Frame is turned on, you will see the menu screen as below.



There are seven modes for you choose: Photo, Music, Video, File, E-BOOK, Calendar and Setting.

Viewing individual picture

Select the desired media on the main menu. Select the “ Photo” option from the menu and press ENTER to enter into photo thumbnail screen, Use the UP/DOWN, LEFT/RIGHT cursor to choose the photo you want to view.



When the picture which you selected has been highlighted, press ENTER to enter into slide show mode.




Press OSD button while the photo in pause mode, then the user will see the information as below.

Listening to MP3 music

Select the desired media menu and press ENTER.


A list of music files will be listed on the left side of the screen. The right side will show the frequency chart and information status bar. The song information will display below the status bar. Use the UP/DOWN cursor to select the music file and press ENTER to play.

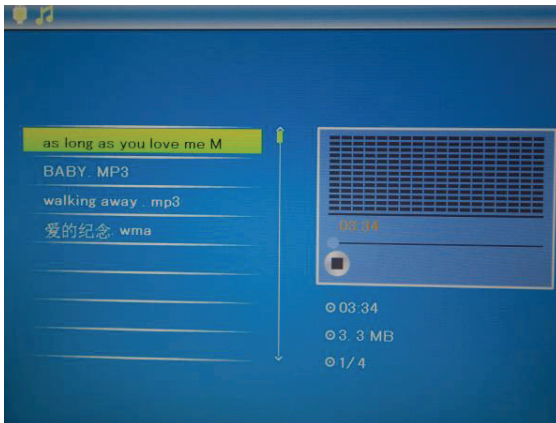

Playing video files

The digital photo frame is compatible with following video formats: JPEG, MPEG-1, MPEG-2, MPEG-4.

 Select the desired media on the main menu and press ENTER. A list of all movie files will be listed on the left side of the screen. The right side consists of the movie preview window and information display of the current movie. Use UP/ DOWN cursor to select and press ENTER to play.

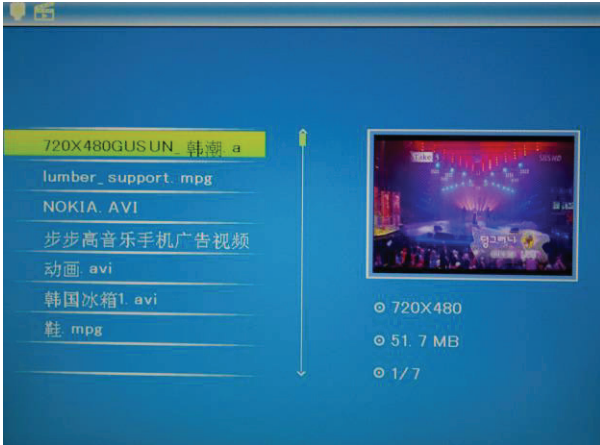


Once a movie is playing, press the OSD button on the remote control. The following display menu will appear.



E-book


Select E-book icon in the main menu then press ENTER.

A list of txt files will be listed on the left side of the screen. Use UP/ DOWN cursor to select and press ENTER to play.

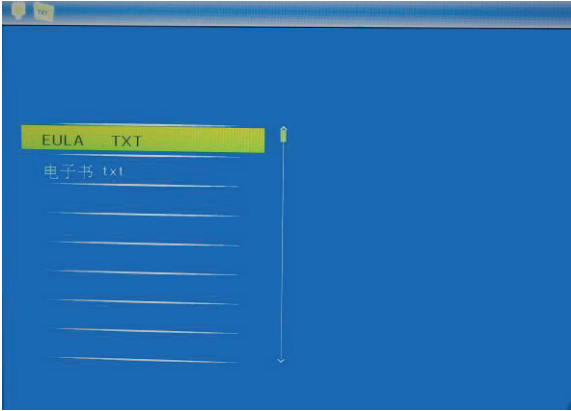

Play a Slideshow with Background Music


 
Ensure that you have at least one picture and one MP3 music file saved on the selected memory card, USB device.

Select the desired media menu and press ENTER to enter into photo slideshow mode, then press the  button on the remote control to begin the slideshow with

background music.

Delete files in the file list screen

If the user wants to do delete, press the ENTER button to enter into sub-menu , use the UP/DOWN cursor to select the file and press the OSD button, the screen will show user DELETE/EXIT information in the screen. Use the UP/DOWN cursor to select DELETE and press ENTER to confirm, Press the ENTER to turn off the submenu and go back to the file list.

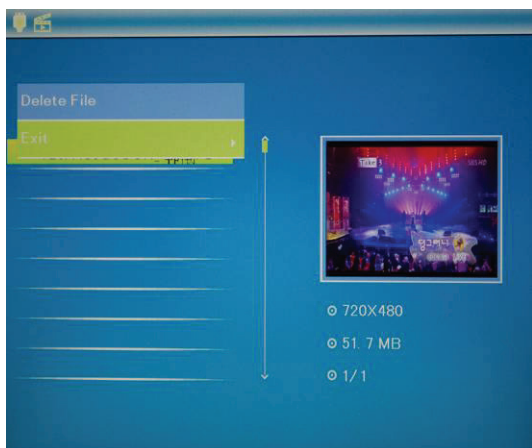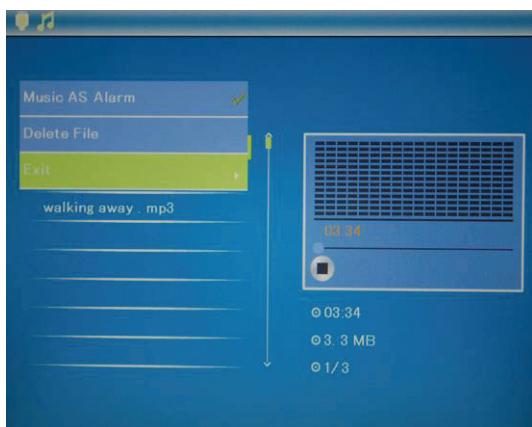


Calendar and alarm clock

From the MAIN MENU screen, select Calendar/clock and press ENTER, the Calendar/ Clock screen will display. If the Alarm is turned on, it will also show the alarm time. A picture slideshow will begin at the picture at the picture preview window at the right part of the screen.



Feature Setup

Many of the picture frame functions can be adjusted to your preference. By using the SETUP option from the main menu, the following changes can be made: use the ENTER button and UP/DOWN arrows to change the options.

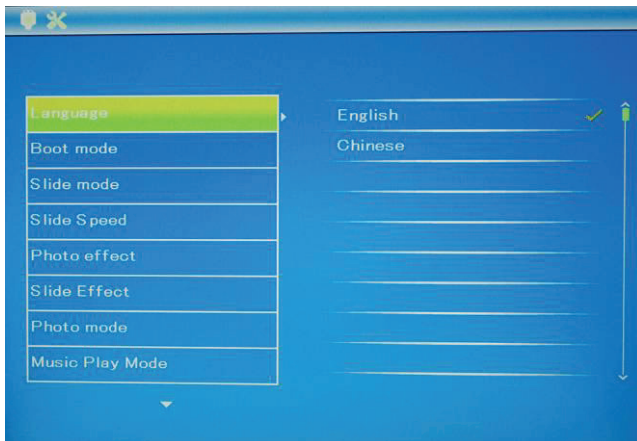

function	description
languages	support English, Chinese etc
Boot mode	Auto play, music, video, image, calendar etc
Slide mode	single window, split window, three windows
Slide speed	3 sec, 5 sec, 15 sec,30 sec 1 hour
Photo effect	colorful, black, dark brown
Slide effect	random shutter, brick etc
Photo mode	Original ,optimization, full-screen
Music play mode	re-play one, repeat, re-play all etc
Video mode	Original. Maximum etc
display	Contrast, brightness, color, tonality etc
Set time/date	Year, month, day, hour, minute, second
Set time format	12-hour clock or 24-hour clock
Alarm	The state and mode of alarm clock
Auto power off	optional
Format built-in memory	optional
Reset setting	optional
Exit	return to main screen

Remark:

When you set time or date, make sure select SAVE TIME option and press ENTER, then you can save the setting. Except it, the other settings you can press EXIT only then can save the setting .

